

Кодированные магнитные датчики безопасности серии SR A

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04


Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: poz@nt-rt.ru || сайт: <https://pizzato.nt-rt.ru/>


Selection diagram

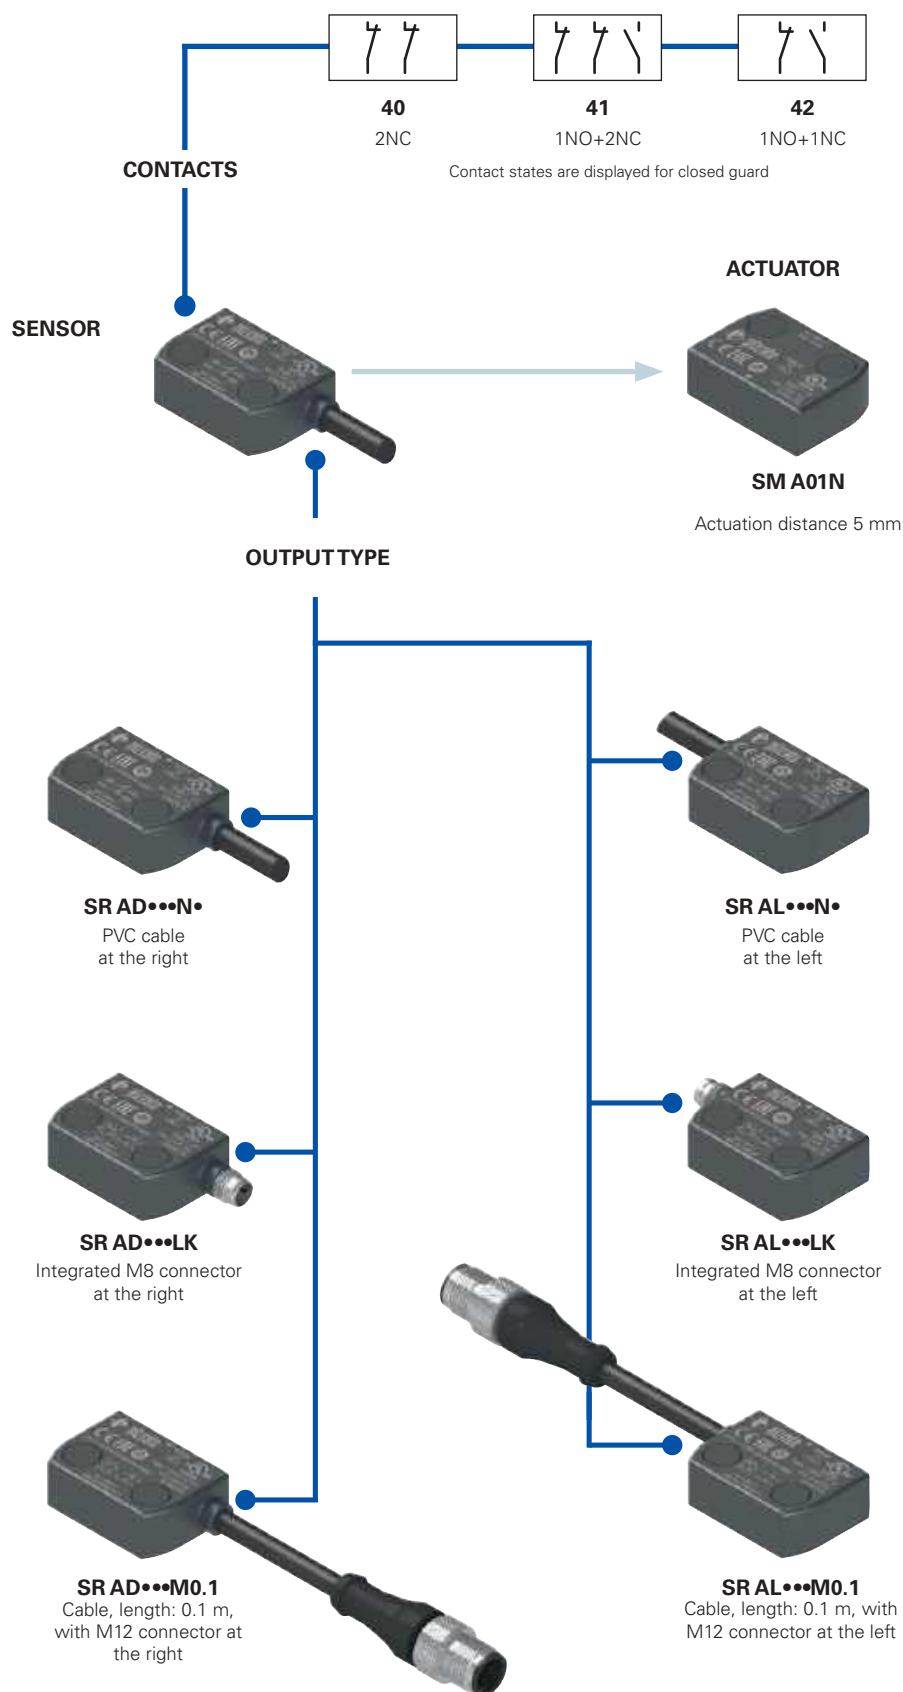




Code structure for sensor with actuator

Attention! The feasibility of a code number does not mean the effective availability of a product. Please contact our sales office.

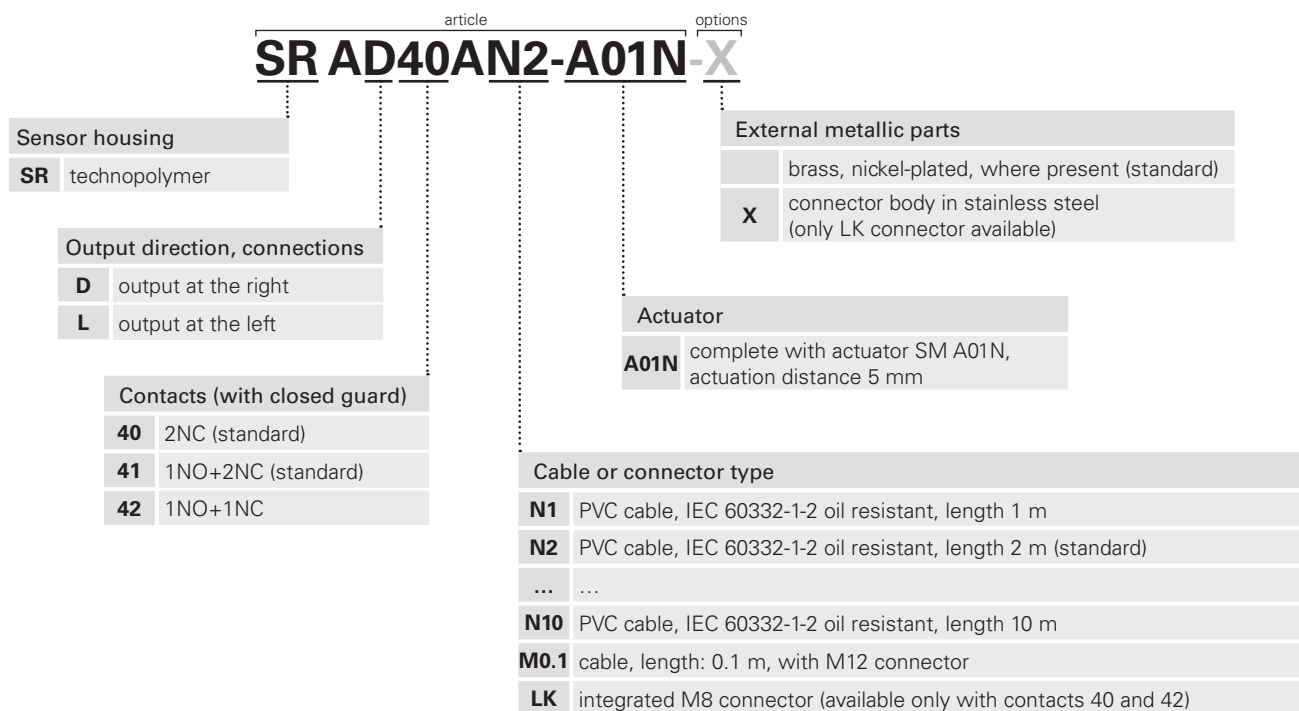

Code structure for single sensor

Attention! The feasibility of a code number does not mean the effective availability of a product. Please contact our sales office.

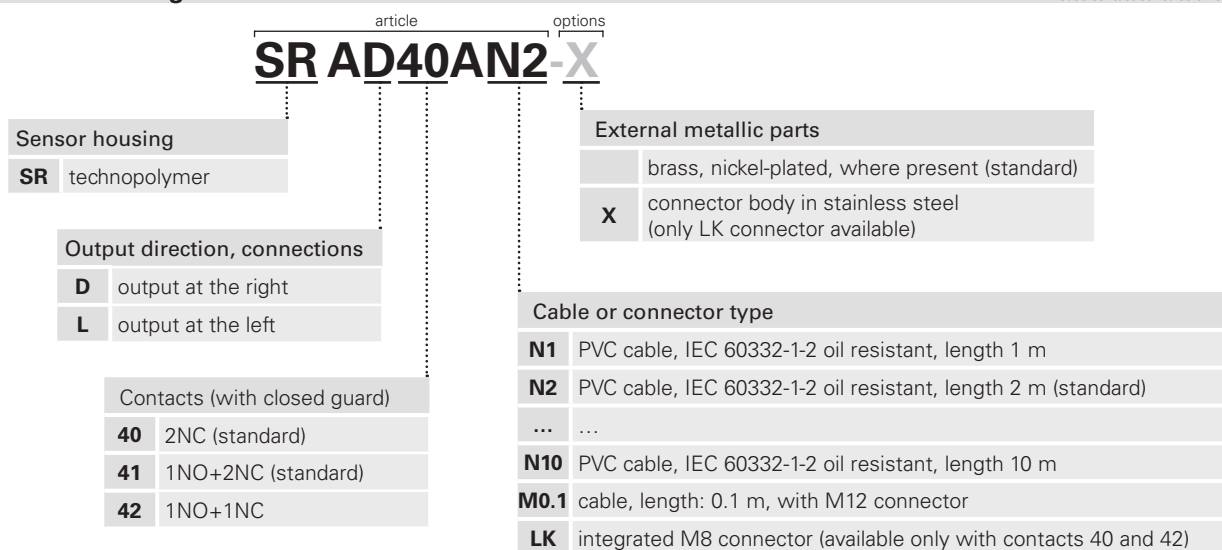

Attention! The feasibility of a code number does not mean the effective availability of a product. Please contact our sales office.

Code structure for single actuator

SM A01N

Actuator	
A01N	actuation distance 5 mm



Main features

- Actuation without mechanical contact
- Output contacts: 2NC, 1NO+2NC or 1NO+1NC
- Insensitive to dirt
- Protection degrees IP67 and IP69K
- Coded actuator
- Technopolymer housing
- Versions with M8 or M12 connector

Quality marks:



UL approval: E496318
TÜV SÜD approval: Z10 18 05 75157 024
EAC approval: RU C-IT.VT03.B.00035/19

Compliance with the requirements of:

Machinery Directive 2006/42/EC,
EMC Directive 2014/30/EU,
RoHS Directive 2011/65/EU.

Technical data

Housing

Housing made of glass fibre reinforced technopolymer, self-extinguishing.
Versions with integrated cable 4 x 0.34 mm² or 6 x 0.25 mm², length 2 m, other lengths from 0.5 m ... 10 m on request.
Versions with integrated M8 connector.
Versions with 0.1 m cable length and M12 connector, other lengths from 0.1 ... 3 m on request

Protection degree:

IP67 acc. to EN 60529
IP69K acc. to ISO 20653
(Protect the cables from direct high-pressure and high-temperature jets)

General data

SIL (SIL CL) up to:
Performance Level (PL) up to:
Safety category up to:
Interlock, no contact, coded:
Coding level:
Safety parameter B_{10D}:

SIL 3 acc. to EN 62061
PL e acc. to EN ISO 13849-1
cat. 4 acc. to EN ISO 13849-1
type 4 acc. to EN ISO 14119
low acc. to EN ISO 14119
20,000,000 (used with Pizzato safety modules)

400,000

(used with max load: DC12 24 V 0.25 A)

20 years

-25°C ... +80°C

-5°C ... +80°C

Mission time:

Ambient temperature:

Ambient temperature with flexible installation

cable:

Vibration resistance:

Shock resistance:

Pollution degree

Screw tightening torque:

10 gn (10 ... 150 Hz) acc. to IEC 60068-2-6

30 gn; 11 ms acc. to EN 60068-2-27

3

0.8 ... 2 Nm

In compliance with standards:

IEC 60947-1:2007, IEC 60947-5-1, IEC 60947-5-2, IEC 60947-5-3 (in abbinamento con un modulo di sicurezza), EN ISO 14119, EN ISO 12100, EN ISO 13849-1, EN ISO 13849-2, IEC 62061, IEC 60204-1, IEC 60529, IEC 61508-1, EN 61508-2, IEC 61508-4, EN IEC 63000, ISO 20653, UL 508, CSA C22.2 No. 14.

Approvals:

UL 508, CSA C22.2 No. 14, EN ISO 13849-1, EN 60947-5-3, EN 61508-1, EN 61508-2, EN 61508-4, EN 62061, EN 60947-1.

Actuation data

Assured operating distance S_{ao}:

Assured release distance S_{ar}:

Repeat accuracy:

Switching frequency:

Distance between two sensors:

5 mm with actuator SM A01N

15 mm with actuator SM A01N

≤ 10%

up to 1 Hz

minimum 50 mm

Electrical data

Rated operating voltage U_e:

Rated operating current I_e:

Rated insulation voltage U_i:

24 Vac/dc

0.25 A (resistive load)

120 Vac (with cable)

50 Vac / 75 Vdc (with M8 connector)

120 Vac (with M12 connector, 4-pole)

30 Vac / 36 Vdc (with M12 connector, 8-pole)

6 kV / 1.5 kV (with connector)

0.25 A

6 W (resistive load)

0.25 A type F

1 million operating cycles

100 A

Rated impulse withstand voltage (U_{imp}):

Thermal current I_{th}:

Maximum switching load:

Protection fuse:

Electrical endurance:

Rated conditional short-circuit current:

⚠ If not expressly indicated in this chapter, for correct installation and utilization of all articles see the instructions given on pages 439 to 454.

Connection with safety modules for safety applications:

Connection with safety modules CS AR-01••••; CS AR-02••••; CS AR-04••••; CS AR-05••••; CS AR-06••••; CS AR-08••••; CS AR-46•024; CS AR-91••••; CS AT-0••••; CS AT-1••••; CS AT-3••••; CS FS-5••••; CS MF••••••; CS MP••••••.

When connected to the safety module, the sensor can be classified as a control circuit device up to PDF-M (EN 60947-5-3).

The system can be used in safety circuits up to PL e/SIL 3/category 4 in accordance with EN ISO 13849-1.

Features approved by UL

Electrical Ratings: 24 Vdc, 0.25 A (resistive load)
Environmental Ratings: Types 1, 4X, 6, 12, 13
Accessory for series SR for actuator switch series SM A.

Features approved by TÜV SÜD

Supply voltage: 24 Vac/dc
Rated operating current (max.): 0.25 A
Ambient temperature: -25°C ... +80°C
Protection degree: IP67
PL, category: PL e, cat. 4. with CS AR-08

In compliance with standards: 2006/42/EC Machinery Directive, EN ISO 13849-1:2015 (Cat. 4, PL e), EN 60947-5-3:2013, EN ISO 14119:2013, EN 61508-1:2010 (SIL 3), EN 61508-2:2010 (SIL 3), EN 61508-4:2010 (SIL 3), EN 62061:2005/A2:2015 (SIL CL 3)




Description



Coded magnetic sensors are devices suitable for monitoring protections and guards of machines without inertia which, when linked to a safety module, can create a system with safety category up to SIL 3 according to EN 62061, up to PL e according to EN ISO 13849-1 and up to category 4 according to EN ISO 13849-1. These products consist of a sensor that detects the magnetic field and which is connected to the machine structure and of a coded magnetic actuator, which is connected to the movable guard. When the sensor and actuator are approached (closed guard), the sensor detects the actuator and actuates the electrical contacts. The sensor is designed to be activated only by the correct coded actuator and not through a common magnet.


Insensitivity to dirt

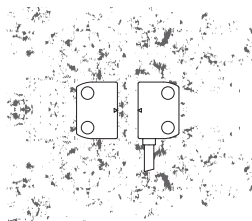

Magnetic sensors are totally sealed and retain their safety characteristics also where dirt and dust are present (not ferromagnetic material).

This characteristic, combined with the design without recesses, makes them particularly suitable for use in the food industry.


Wide actuation range

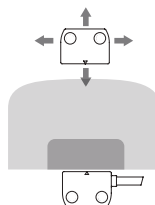

With their built-in features, magnetic sensors have a wide actuation range, making them very well suited for applications with large tolerances or where mechanical properties change over time.


In this type of sensor, the actuation distances may vary depending on the shift direction of the actuator in relation to the sensor.

Protection against tampering

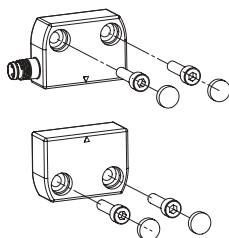

Each sensor and actuator of the SR A series is supplied complete with snap-on protection caps to be applied on the holes of the fixing screws. Not only do the caps prevent dirt from accumulating and simplify cleaning, they also block access to the fastening screws of the actuator. As a result, standard screws can be used instead of tamper-proof screws.

Actuation from many directions

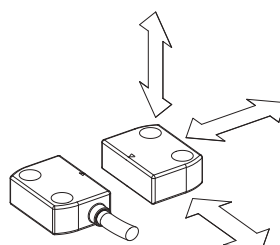

The coded magnetic sensors were designed to be activated by the respective actuator from various directions.


The customer therefore enjoys maximum flexibility when positioning devices along the perimeter of the guards.

Laser engraving



All devices are marked using a dedicated indelible laser system. These engravings are therefore suitable for extreme environments too. Thanks to this system that does not use labels, the loss of plate data is prevented and a greater resistance of the marking is achieved over time.

Assembly of multiple sensor-actuator systems

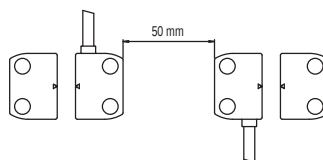

It is possible to install more than one device on the same machine. The minimum mounting distance between sensor-actuator systems is only 50 mm.

Protection degrees IP67 and IP69K

IP69K
IP67


These devices are designed to be used under the toughest environmental conditions, and they pass the IP67 immersion test acc. to EN 60529. They can therefore be used in all environments where the maximum degree of protection is required for the housing. Due to

their special design, these devices are suitable for use in equipment subjected to cleaning with high pressure hot water jets. These devices meet the IP69K test requirements according to ISO 20653 (water jets with 100 bar and 80°C).

Series connection of multiple sensors

The coded magnetic sensors can be connected in series with the only limitation that the overall resistance, of sensors and the related wiring, has to be not higher than the admitted max. value of the module, which typically is equal to 50 Ω (see module features). This is a very high value that, with normal wiring, allows the use of dozens of sensors without problems. It is also possible to realise mixed circuit solutions by connecting coded magnetic sensors in series to safety switches, with the only limitation being the above-mentioned maximum electrical resistance.


It should be noted that the series connection of two or more coded sensors reduces the self-monitoring capacity of the system, see ISO/TR 24119. The use of Pizzato Elettrica safety modules is recommended.

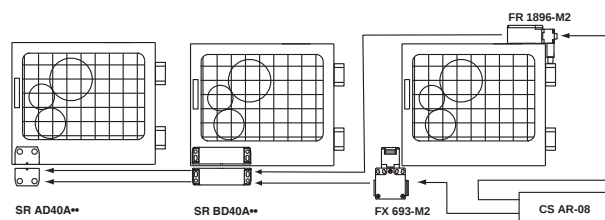

Internal connections with cable

Contact states are displayed for closed guard


With cable (2NC)



With cable (1NO+1NC)



With cable (1NO+2NC)

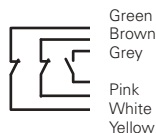

Internal connections with connector

Contact states are displayed for closed guard

With M12 connector (1NO+2NC)



With M12 connector (2NC)



With M12 connector (1NO+1NC)



With M8 connector (2NC)



With M8 connector (1NO+1NC)



For female connectors, see page 419

Connection with safety modules


A coded magnetic sensor alone cannot be used for safety functions because its operating principles are not considered safe by the standards (e.g. the positive opening on mechanical switches).

For this reason, a magnetic sensor coded for use in safety applications must always be connected to a safety module with at least two channels that monitors the proper function.

Compatible safety modules

The magnetic sensors have been tested and approved for operation with suitable safety modules (see list).

The use of complete and tested solutions guarantees the electrical compatibility between the sensor and safety module, as well as high reliability.

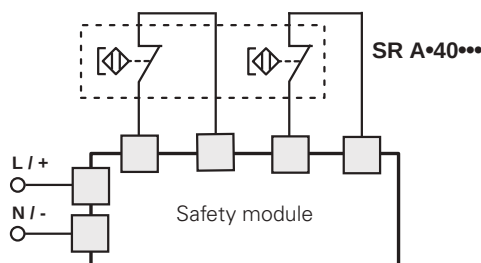

Sensors	Compatible safety modules	Safety module output contacts	
		Instantaneous contacts	Delayed contacts
SR AD40A•• SR AD41A•• SR AD42A•• ^a	CS AR-01•••• ^b	2NO+1NC	/
	CS AR-02•••• ^b	3NO	/
	CS AR-04•••• ^b	3NO+1NC	/
	CS AR-05••••	3NO+1NC	/
	CS AR-06••••	3NO+1NC	/
	CS AR-08••••	2NO	/
	CS AR-46•024	1NO	/
	CS AR-91••••	2NO+1PNP	/
	CS AR-94••••	2NO	/
	CS AR-95••••	2NO	/
	CS AT-0•••••	2NO+1NC	2NO
	CS AT-1•••••	3NO	2NO
	CS AT-3•••••	2NO	1NO
	CS FS-5•••••	1NO+1NC+1CO	/
	CS MP••••••••	see page 369	see page 369
	CS MF••••••••	see page 401	see page 401


^a Compatible with CS MF202••-P4 and CS MP•••••••• only.

^b Compatible with modules with production batch later than 06/2014 only. For features of the safety modules see page 305.

Connection with safety modules CS AR-05 or CS AR-06

Input configuration with manual start (CS AR-05) and monitored start (CS AR-06)


2 channels

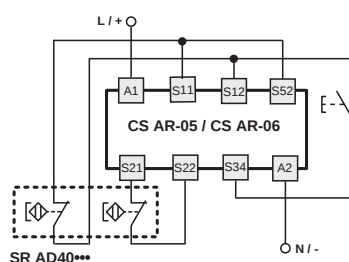

Connection with safety modules CS AR-08 or CS AT

Input configuration with manual start



2 channels

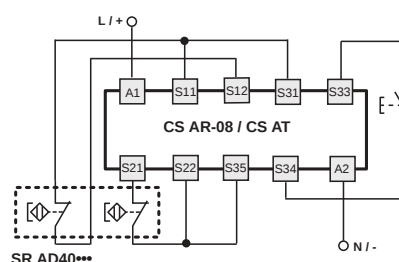

For features of the safety modules see page 305.



Operating distances SR AD.....A01N

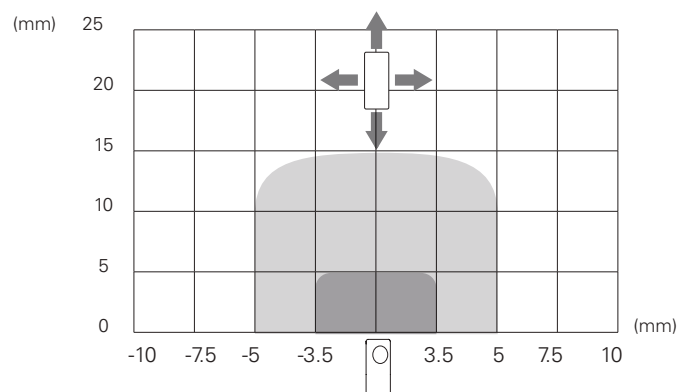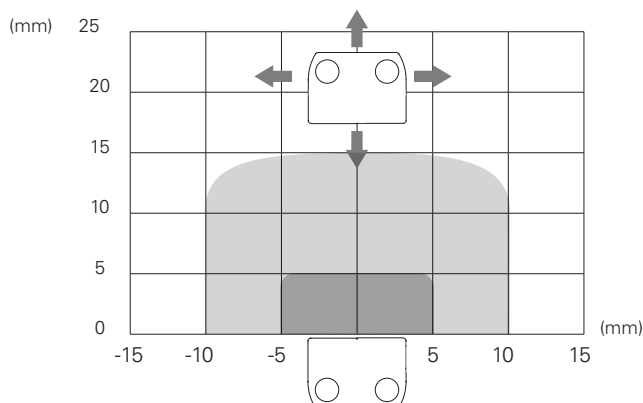

Legend:

Assured operating distance S_{ao}

Assured release distance S_{ar}

Note: The progress of the activation areas is for reference only

Dimensional drawings


Integrated cable, length: 2 m, at the right		Integrated cable, length: 2 m, at the left	
SR AD40AN2	2NC	SR AL40AN2	2NC
SR AD41AN2	1NO+2NC	SR AL41AN2	1NO+2NC
SR AD42AN2	1NO+1NC	SR AL42AN2	1NO+1NC

coded actuator Low level of coding acc. to EN ISO 14119	
SM A01N	Actuation distance 5 mm


M8 connector, at the right	M8 connector, at the left	Cable, length: 0.1 m, with M12 connector at the right	Cable, length: 0.1 m, with M12 connector at the left
SR AD40ALK	SR AL40ALK	SR AD40AM0.1	SR AL40AM0.1
/	/	SR AD41AM0.1	SR AL41AM0.1
SR AD42ALK	SR AL42ALK	SR AD42AM0.1	SR AL42AM0.1
2NC	2NC	2NC	2NC
1NO+2NC	1NO+2NC	1NO+2NC	1NO+2NC
1NO+1NC	1NO+1NC	1NO+1NC	1NO+1NC

Accessories

Spacer

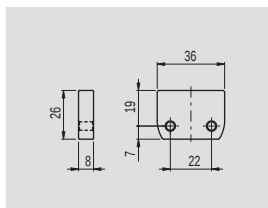

If possible do not mount the sensor and the actuator on ferromagnetic materials. This spacer is placed between the magnetic safety sensors and metal surfaces that can deflect the magnetic field: as a result, the activation and deactivation distances of the sensor remain the same. Because it is made out of a single block of material, it is especially well suited for applications where a high level of cleanliness is required, as any material present in the installation area cannot penetrate and accumulate.

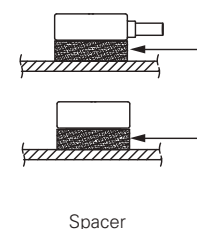

Spacer

Article	Description
VS SP1AA1	Technopolymer spacer for SR A series sensors

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: poz@nt-rt.ru || сайт: <https://pizzato.nt-rt.ru/>